



Leica 3D Disto





Area & Volume, Roof Measurement

- when it has to be **right**

Leica
Geosystems

Horizontal Area

Measurements and Results

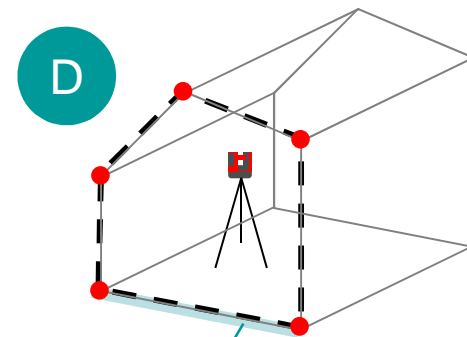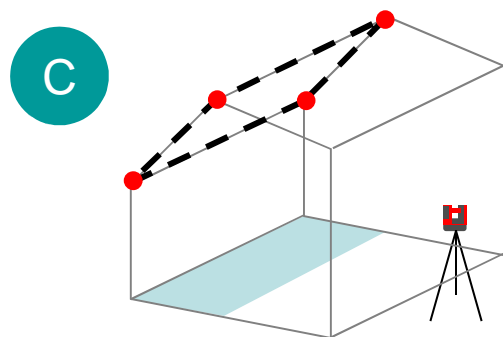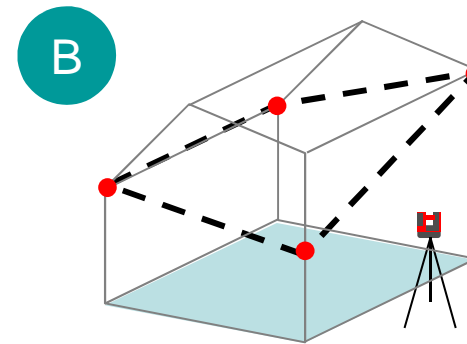
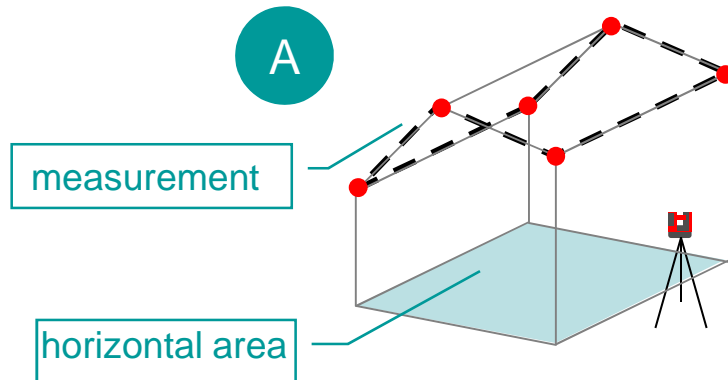


Area ~0.00




- when it has to be **right**

Horizontal Volume

Measurements and results

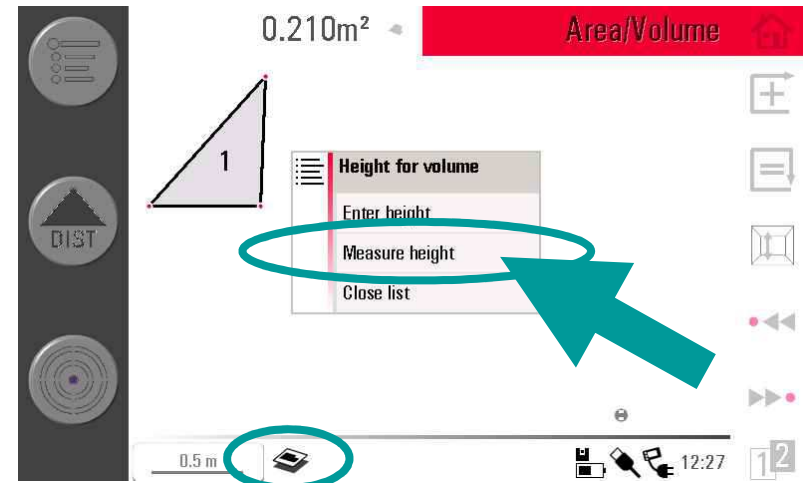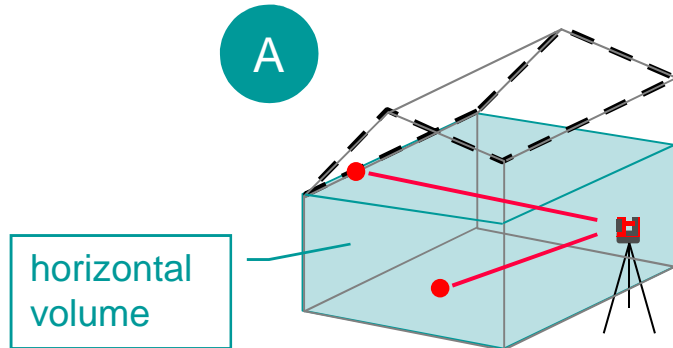



Having measured the area you can enter a height or measure two points instead.

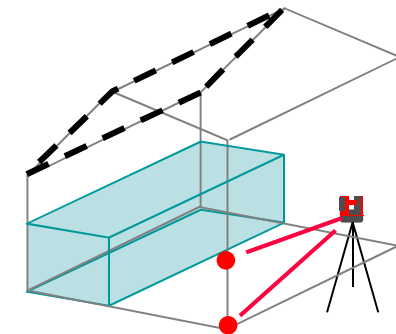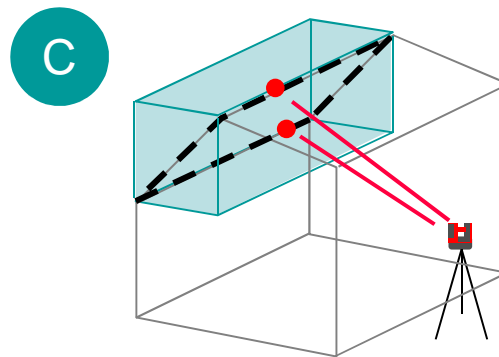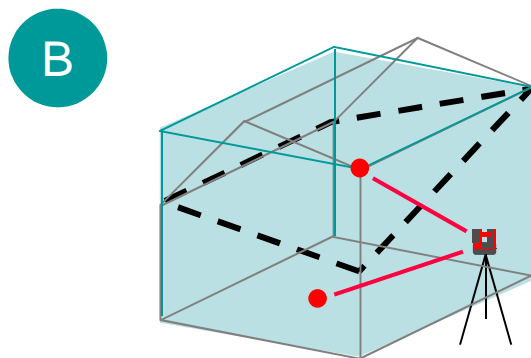



- when it has to be **right**

Slope Area

Measurements and Results

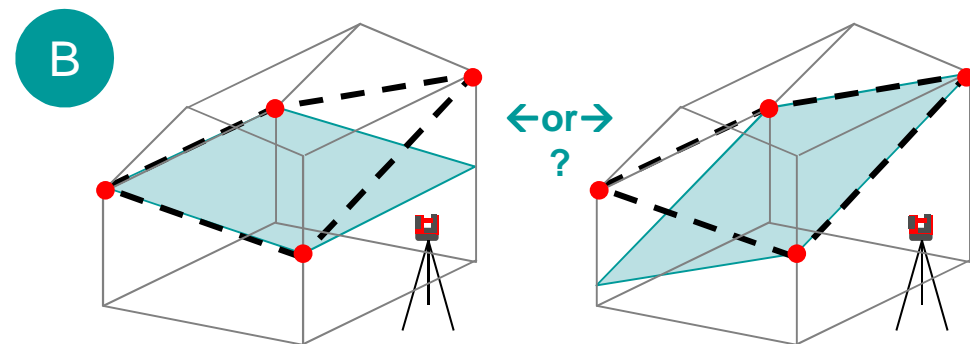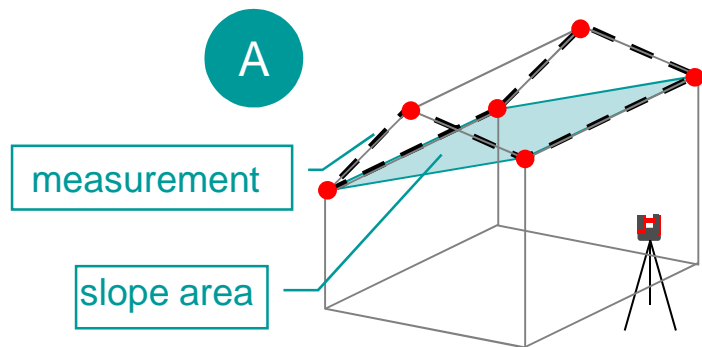




→ To avoid wrong results, all measured points should be on the tilted plane

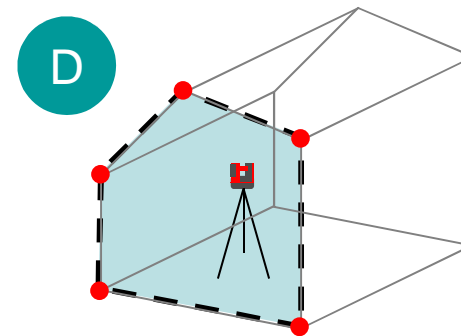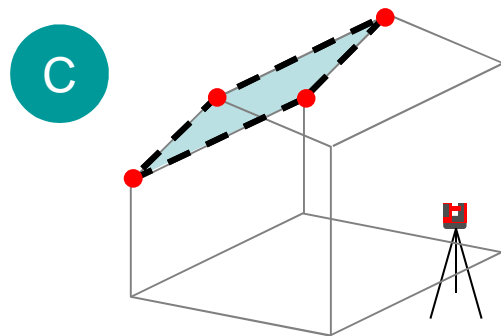


- when it has to be **right**

Slope Area

Measurements and Results

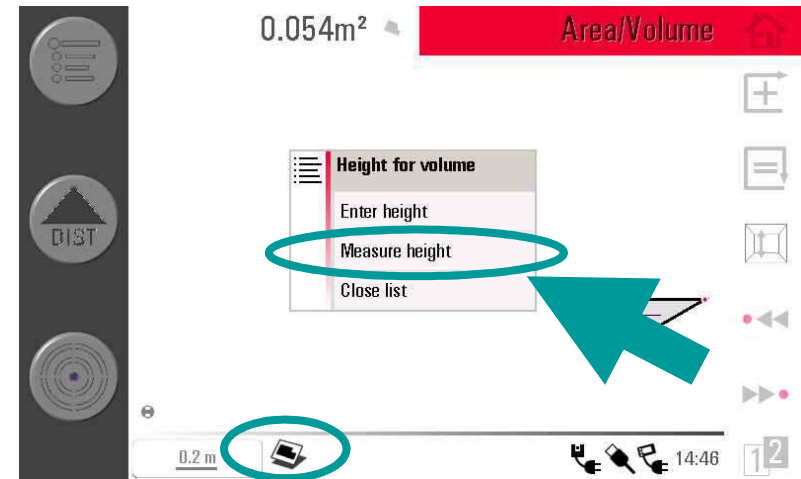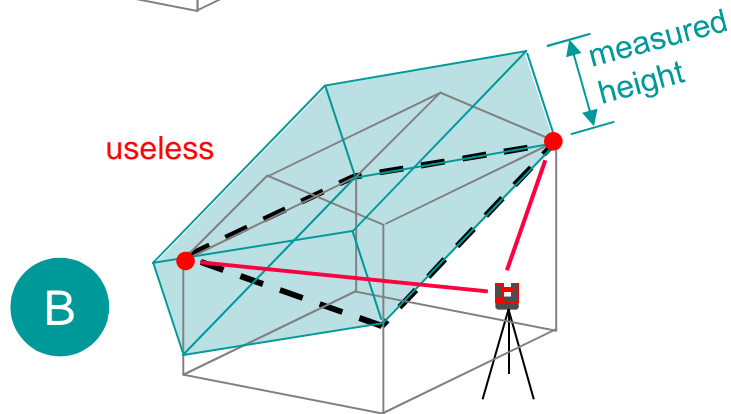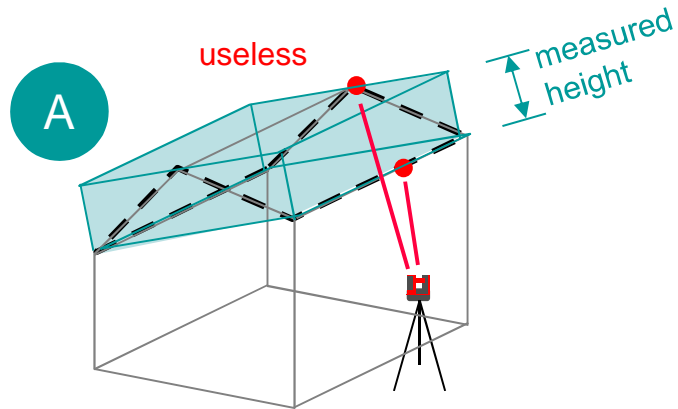

Having measured the area you can enter a height or measure two points instead.

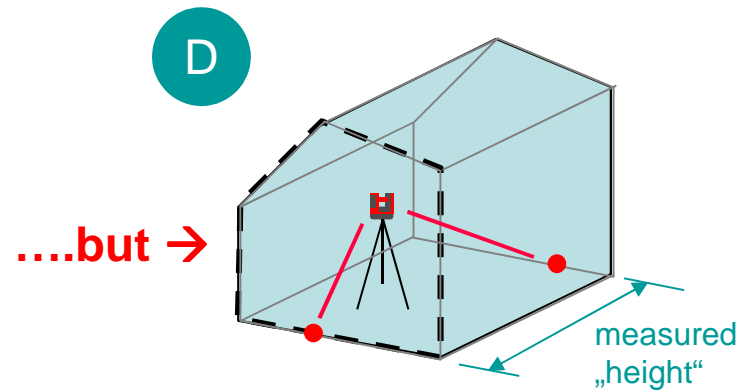


....but →

- when it has to be **right**

Example

Roof Measurement

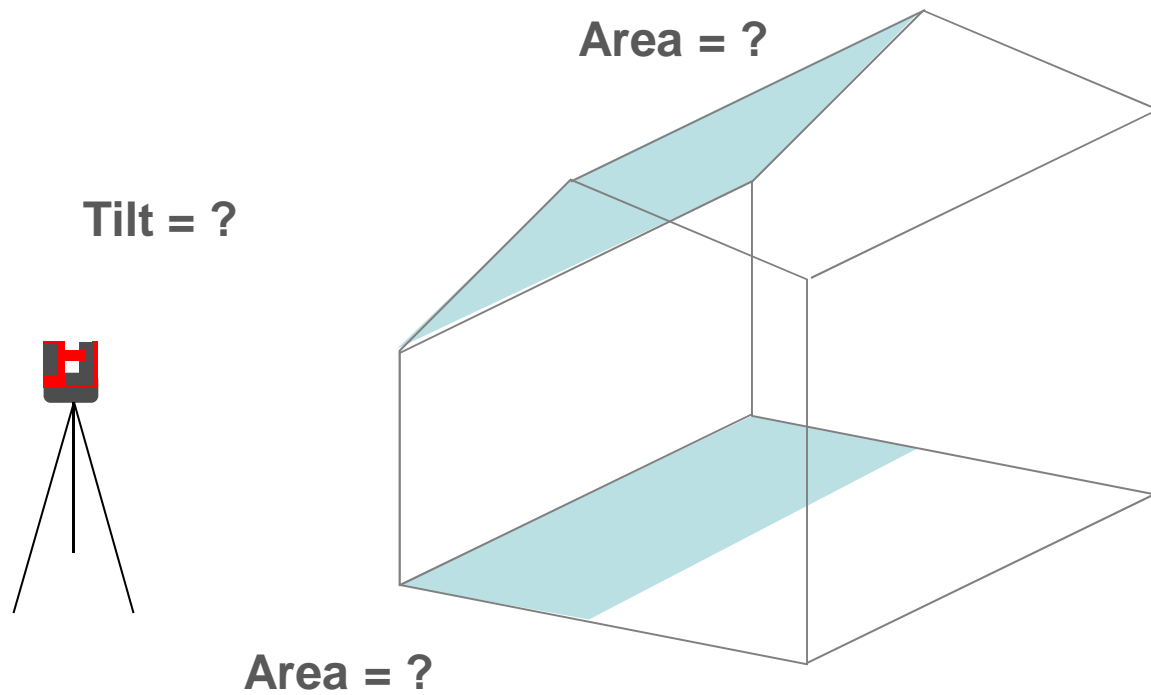

- when it has to be **right**

Example

Roof Measurement



1.



Start «Area» application

2.




Select «horizontal area»


- when it has to be **right**

Example

Roof Measurement

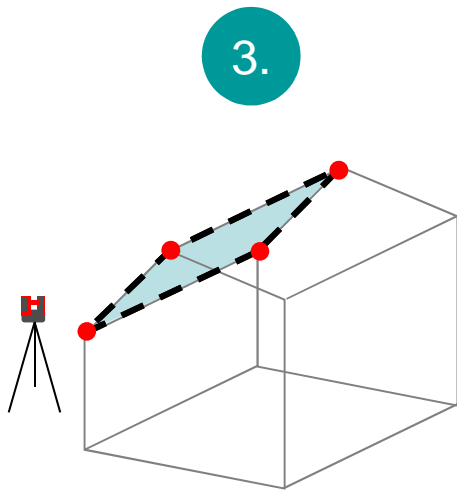

Measure 4 roof corners

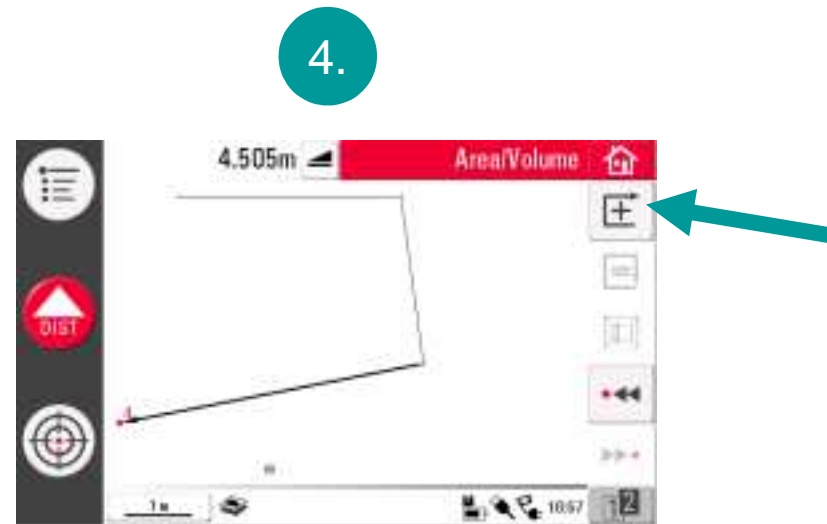

Press «add line» key

- when it has to be **right**

Example

Roof Measurement



5.



Select next line, press «add key», repeat ...

6.



Finally press «close» key

- when it has to be **right**

Example

Roof Measurement



7.



popup appears; press „close list“ if you do not need a volume

8.



the horizontal area is displayed in the result window.

Press key to see more results.

- when it has to be right

Example

Roof Measurement



9.



quit „horizontal area“

10.



now start „slope area“ application


- when it has to be **right**

Example

Roof Measurement



The slope area is displayed. The small arrow indicates the slope direction.

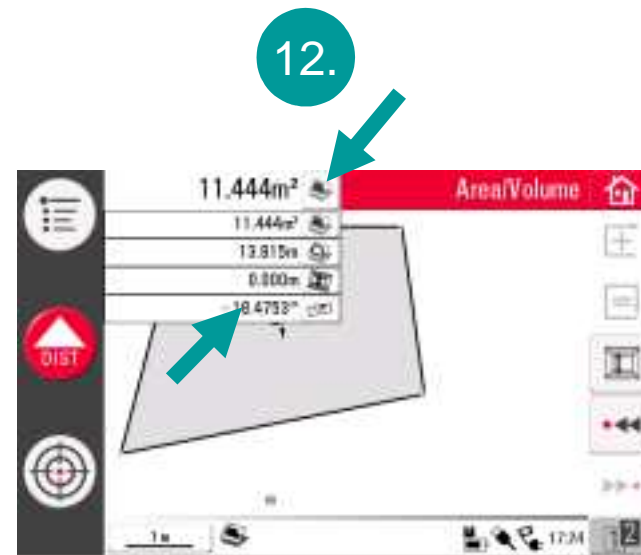

Press result key to see more. The tilt is displayed.


- when it has to be right

Example

Roof Measurement




13.

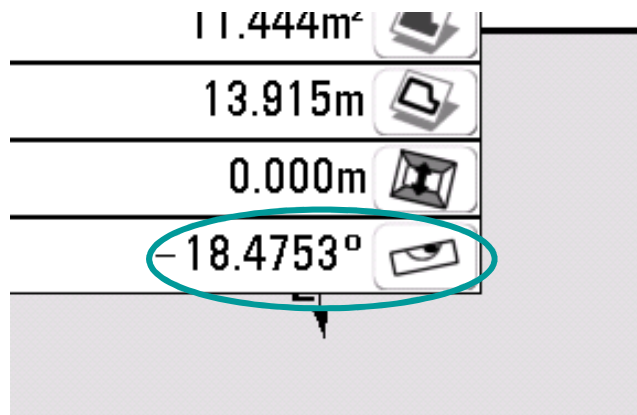

If you want the tilt to be displayed in other units...

14.

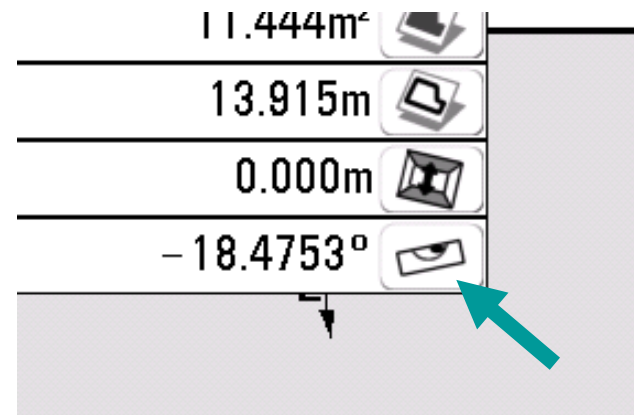

...press result selection

- when it has to be **right**

Example

Roof Measurement



15.



...open the menu....

16.



→ Settings → units → slope →
select the desired unit

- when it has to be **right**

Example

Roof Measurement



17.

-1:2.99

Applications...	Snap Radius...
File Manager	Assistant...
Calculator	Units...

the desired unit is displayed

- you can switch between „horizontal area“ and „slope area“ at any time
- you do not have to measure twice
- you can change the units at any time

- when it has to be **right**


myworld

Further tutorials for download

If you register at myWorld@Leica Geosystems you will have access to a wide range of services, information and training material:

- warranty extension
- tutorials
- software updates
- support
- manuals
- ...
- ...

<https://myworld.leica-geosystems.com>
www.3ddisto.com

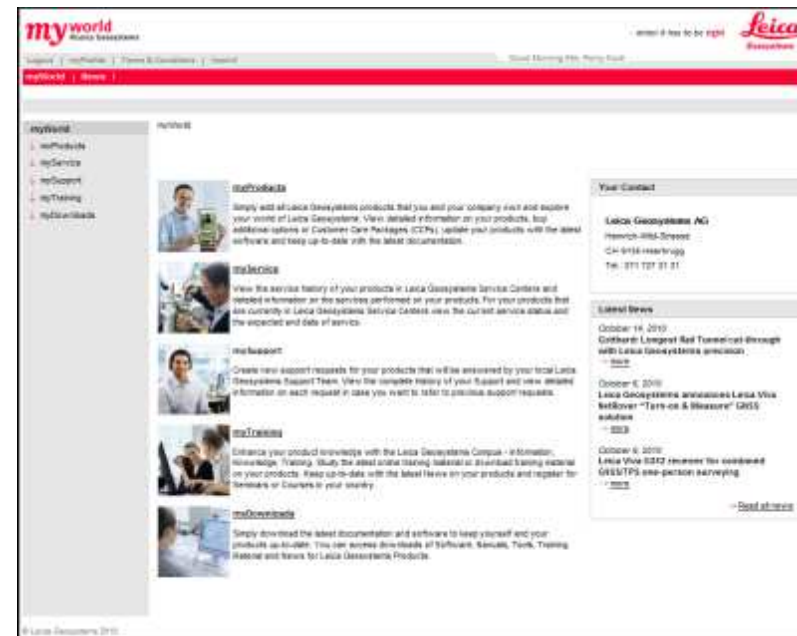

- when it has to be **right**

